

PROGRAMMING


ID	O	V	ID	O	V	ID	O	V
1	1	1	11	4	44	22	3	87
1	2	2	12	1	45	22	4	88
1	3	3	12	2	46	23	1	89
1	4	4	12	3	47	23	2	90
2	1	5	12	4	48	23	3	91
2	2	6	13	1	49	23	4	92
2	3	7	13	2	50	24	1	93
2	4	8	13	3	51	24	2	94
3	1	9	13	4	52	24	3	95
3	2	10	14	1	53	24	4	96
3	3	11	14	2	54	25	1	97
3	4	12	14	3	55	25	2	98
4	1	13	14	4	56	25	3	99
4	2	14	15	1	57	25	4	100
4	3	15	15	2	58	26	1	101
4	4	16	15	3	59	26	2	102
5	1	17	15	4	60	26	3	103
5	2	18	16	1	61	26	4	104
5	3	19	16	2	62	27	1	105
5	4	20	16	3	63	27	2	106
6	1	21	16	4	64	27	3	107
6	2	22	17	1	65	27	4	108
6	3	23	17	2	66	28	1	109
6	4	24	17	3	67	28	2	110
7	1	25	17	4	68	28	3	111
7	2	26	18	1	69	28	4	112
7	3	27	18	2	70	29	1	113
7	4	28	18	3	71	29	2	114
8	1	29	18	4	72	29	3	115
8	2	30	19	1	73	29	4	116
8	3	31	19	2	74	30	1	117
8	4	32	19	3	75	30	2	118
9	1	33	19	4	76	30	3	119
9	2	34	20	1	77	30	4	120
9	3	35	20	2	78	31	1	121
9	4	36	20	3	79	31	2	122
10	1	37	20	4	80	31	3	123
10	2	38	21	1	81	31	4	124
10	3	39	21	2	82	32	1	125
10	4	40	21	3	83	32	2	126
11	1	41	21	4	84	32	3	127
11	2	42	22	1	85	32	4	128
11	3	43	22	2	86			

INTRODUCTION

The AGRI RX can be programmed either from an ICI unit or a handheld programmer.

INSTRUCTION

1. When the battery is connected the green LED and the yellow LED on the righthand side will illuminate on a V5.01 receiver.
2. Wait till the green LED on the right-hand side switch off, only the yellow LED second from right must be on before learning the receiver.
3. The yellow learn LED will switch off as soon as the receiver receives the learn signal and recognize it.
4. Switch on the range test function on the transmitter, the green LED third from the righthand side will flash as soon as a signal is received.
5. When the range test is switched on the flashes on the Green LED third from the righthand side can be counted to determine the signal strength. 8 Flashes are full signal strength and 1 is poor signal strength. It is recommended not to use the system below 5 flashes.
6. The Red LED on the left-hand side flashing red will indicate a battery low status. When the battery voltage is to low no LED indications will be visible.
7. When there was a battery low status, and the battery is replaced the red LED low battery warning might still flash until the status is updated and the LED will reset. Permit some time for the red LED to update the status after a new battery was inserted in the unit.

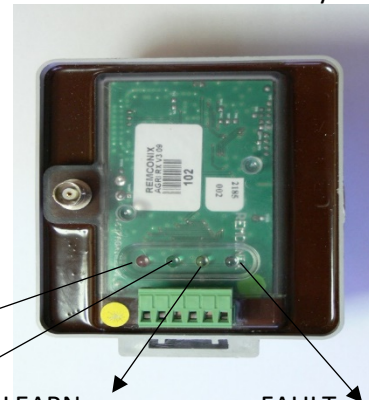

BATTERY	SIGNAL	LEARN	FAULT
LOW	INDICATION	INDICATION	INDICATION

Flashes when batt low.

Flashes when signal received.

Unit can only be programmed when illuminated.

Comes on when unit is powered up. Must go off after 15 seconds.